

IDCard Metal

Door Access System

Default Installer Code: **881122**
Default Global User PIN: **1234**
Default Individual PIN: **0000**

CHANGE INSTALLER CODE

[#][**881122**] (Green LED ON)
[0] [6-digit New Installer Code]
[repeat 6-digit New Installer Code]
[#][#] to exit program

ADD CARD

[#][**881122**] (Green LED ON)
[5][3-digit User# eg. 001,002,003,004,...]
[Flash one New Card]
[#][#] to exit program
Note: recommended to use the last 3-digit of the printed card number

DELETE one CARD

[#][**881122**] (Green LED ON)
[7][3-digit User# eg. 001,002,003,004,...]
Or flash card
[#][#] to exit program

DELETE all CARD

- *Refer factory default*

ADD GLOBAL PIN

[#][**881122**] (Green LED ON)
[3][4-digit new PIN]
[#][#] to exit program

DELETE GLOBAL PIN

[#][**881122**] (Green LED ON)
[3][0000]
[#] [#]to exit program

CHANGE DOOR LOCKING TIME (seconds)

[#][**881122**] (Green LED ON)
[2] [2-digit seconds, eg: 05 for 5 seconds]
[#][#] to exit program

CHANGE DOOR OPEN MODE

[#][**881122**] (Green LED ON)
[10] card or pin mode
[11] card + pin mode
[#][#] to exit program

SETTING USER PIN MODE

[#][**881122**] (Green LED ON)
[12] user PIN off
[13] user PIN on
[#][#] to exit program

CHANGE USER PIN

Hold down [#] for 2 seconds
Flash user card
Enter 4-digit old PIN (default: 0000)
Enter 4-digit new PIN
Repeat 4-digit new PIN

OTHERS advance setting

[40] tamper switch OFF
[41] tamper switch ON
[60] door sensor OFF
[61]door sensor ON
[80] door sensor alarm OFF
[81] door sensor alarm ON
[82][tt] delay before alarm on door open

